



 

 





Assembly Instruction

Item No.50762 White Kitchen-Stove wAccessories (Version-1)


Thank you for purchasing VIGA product. Please follow the instructions step by step in order to build the unit correctly.
Attention: Screws should be located and not tightened completely until the unit is constructed into a stove w/accessories.

- | | | | |
|--|---|---|--|
| A  x4PCS | B  x2PCS | C  x2PCS | D  x12PCS |
| E  x6PCS | F  x6PCS | G  x2PCS | |


STEP 1

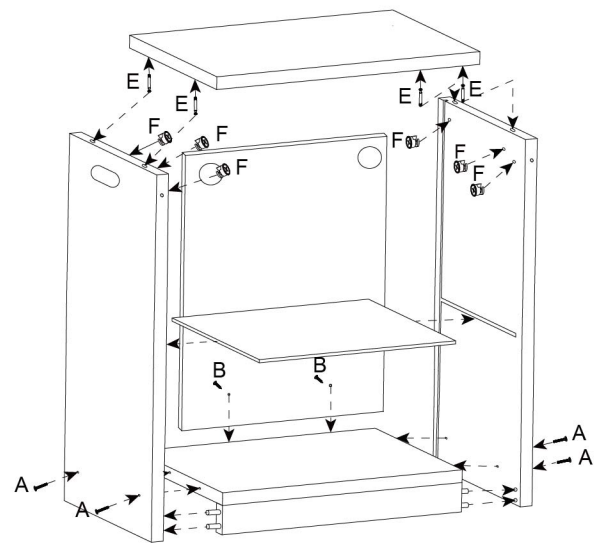

STEP 2

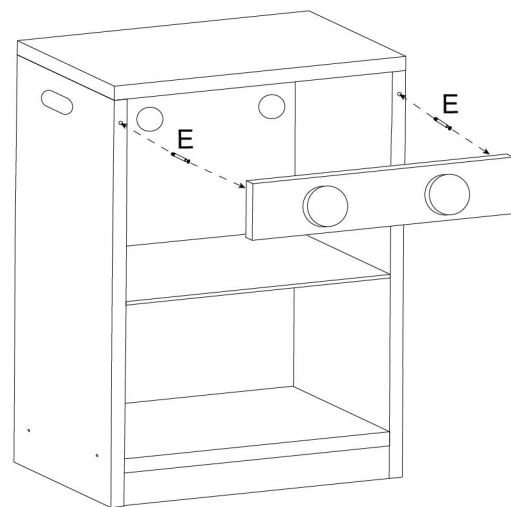

STEP 3

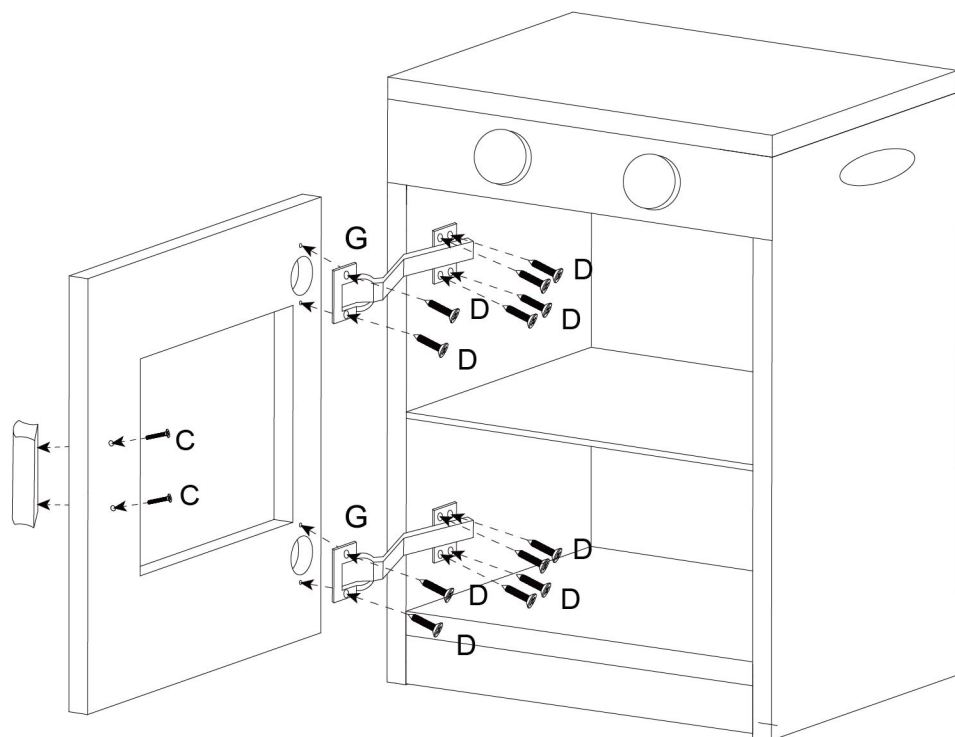

Positioning the Wall Game

Choose a clear and flat area of wall free of cables and pipework.


Care & Maintenance

Inspect the wall game before each use, be aware of loose or missing parts and screws.

1  x2PCS

2  x2PCS


STEP 4

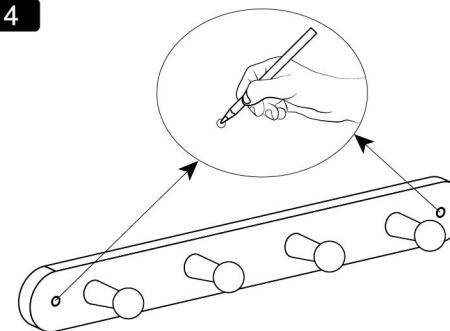

Mark mounting holes by placing the 3 in 1 on wall in position and use the pre - drilled holes in the stove w/accessories to mark the drill locations on the wall.


STEP 5

Drill the holes on the wall using an 8mm drill bit. Drill a hole 45mm in depth.

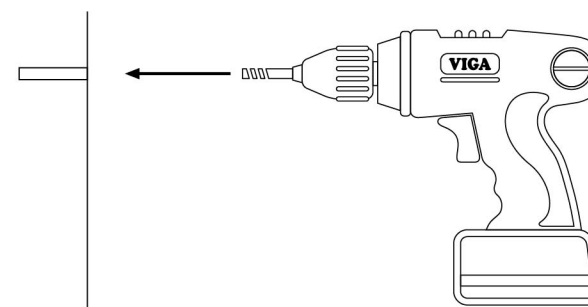

STEP 6


Insert the raw plugs into the holes.

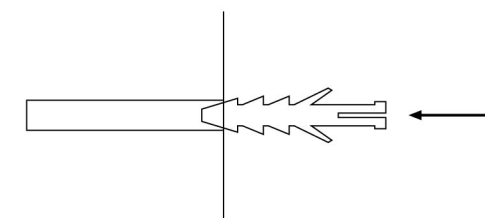

STEP 7

Locate the stove w/accessories into position on the wall with raw plug ends visible through the holes in the stove w/accessories.

Fasten all screws on the stove w/accessories , ensuring all screws are secure and do not protrude the surface.

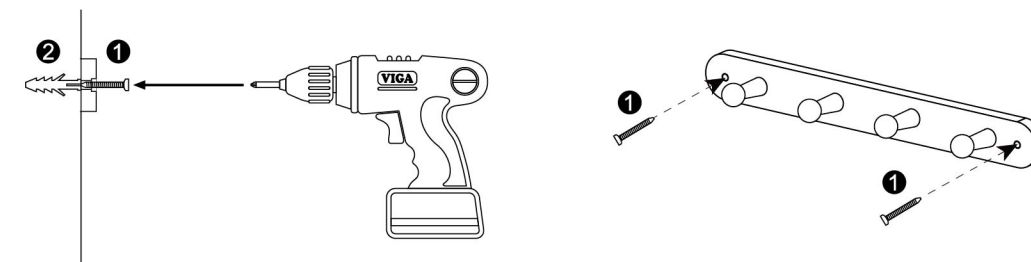

⚠ WARNING:

This toy is required to be assembled by adults only.
It may contain potential choking hazards, small parts or sharp points before assembly.
Incorrect assembly may cause injury to children.
Screws may rust over time, please inspect all the screws periodically.